Electromagnetic Testing Classroom Training Book

Text Correction

The following text correction applies to the first and second printings of the *Electromagnetic Testing Classroom Training Book*. The next printing of this publication will incorporate the correction into the published text.

p. 90: Under Calculation of Fill Factor, the calculation for inside coils should be changed as follows:

Inside coils: Fill factor = d^2/D^2

where: d = coil windings inner outside diameter

D = tube internal diameter

Cat. No. 1643 First printing 12/06 Second printing 03/10 Text correction 03/12